

## ailleunⅢシリーズ カメラ操作一覧

ailleunⅢシリーズ (YS-2500M/YS-2500MC/YS-3000M/YS-3000MC) からカメラ操作を行った場合のカメラ機種ごとの動作です。

ソフトウェア・バージョンは最新である必要があります。

### ●Panasonic (カメラ BB)

	パン・チルト	ズーム	フォーカス	オートフォーカス	ホームポジション	プリセット
BB-HCM100	×	×	×	×	×	×
BB-HCM110	○	×	×	×	○	○
BB-HCM511	○	×	×	×	△	△
BB-HCM515	○	×	×	×	△	△
BB-HCM527	○	○	×	×	○	○
BB-HCM531	○	×	×	×	△	△
BB-HCM547	○	○	×	×	△	△
BB-HCM580	○	○	○	○	○	○
BB-HCM581	○	○	○	○	○	○
BB-HCM701	×	×	×	×	×	×
BB-HCM705	×	△	×	×	×	×
BB-HCM715	○	△	×	×	○	○

BB-HCM735	○	△	×	×	△	△
BB-SC364	○	○	○	○	○	○
BB-SC382	○	○	○	○	○	○
BB-SC384	○	○	○	○	○	○
BB-SP104W	×	×	×	×	×	×
BB-ST162	○	○	×	×	△	△
BB-ST165	○	○	×	×	○	○
BB-SW172	○	○	×	×	△	△
BB-SW174W	○	○	×	×	△	△
BB-SW175	○	○	×	×	○	○
BB-SW374	○	○	○	○	○	○

○：動作します △：動作保証外です ×：動作しません

## ● Panasonic (i-pro)

	パン・チルト	ズーム	フォーカス	オートフォーカス	ホームポジション	プリセット
DG-NF282	×	○	×	×	×	×
DG-NF302	×	×	×	×	×	×
DG-NP244	×	○	×	×	×	×
DG-NP304	×	×	×	×	×	×
DG-NP502	×	×	×	×	×	×
DG-NS202A	○	○	○	○	○	○
DG-NW502S	×	×	×	×	×	×
DG-NW960	○	○	○	○	△	△
WJ(DG)-GXE100	△	△	△	△	△	△
WJ(DG)-GXE500	△	△	△	△	△	△
WV(DG)-S1110	×	×	×	×	×	×

WV(DG)- S1111	×	×	×	×	×	×
WV(DG)- S1112	×	×	×	×	×	×
WV(DG)- S1130	×	×	×	×	×	×
WV(DG)- S1131	×	×	×	×	×	×
WV(DG)- S1510	×	×	×	×	×	×
WV(DG)- S1511	×	×	×	×	×	×
WV(DG)- S1531	×	×	×	×	×	×
WV(DG)- S2110	×	×	×	×	×	×
WV(DG)- S2111	×	×	×	×	×	×
WV(DG)- S2130	×	×	×	×	×	×
WV(DG)- S2131	×	×	×	×	×	×
WV(DG)- S2511	×	×	×	×	×	×
WV(DG)- S2531	×	×	×	×	×	×
WV(DG)- S6110	○	○	○	○	○	○
WV(DG)- S6130	○	○	○	○	○	○
WV(DG)- S6111	○	○	○	○	○	○
WV(DG)- S6131	○	○	○	○	○	○

WV(DG)- S6530	○	○	○	○	○	○
WV(DG)- SC385	○	○	○	○	○	○
WV(DG)- SC386	○	○	○	○	○	○
WV(DG)- SC387	○	○	○	○	○	○
WV(DG)- SC588	○	○	○	○	○	○
WV(DG)- SF132	×	×	×	×	×	×
WV(DG)- SF135	×	×	×	×	×	×
WV(DG)- SF138	×	×	×	×	×	×
WV(DG)- SF334	×	×	×	×	×	×
WV(DG)- SF335	×	×	×	×	×	×
WV(DG)- SF438	△	△	△	△	△	△
WV(DG)- SF539	×	×	×	×	×	×
WV(DG)- SFN110	×	×	×	×	×	×
WV(DG)- SFN130	×	×	×	×	×	×
WV(DG)- SFN310	×	×	×	×	×	×
WV(DG)- SFN311	×	×	×	×	×	×
WV(DG)- SFN531	×	×	×	×	×	×

WV(DG)- SFN611	×	×	×	×	×	×
WV(DG)- SFN631	×	×	×	×	×	×
WV(DG)- SFV110	×	×	×	×	×	×
WV(DG)- SFV130	×	×	×	×	×	×
WV(DG)- SFV311	×	×	×	×	×	×
WV(DG)- SFV531	×	×	×	×	×	×
WV(DG)- SFV611	×	×	×	×	×	×
WV(DG)- SFV631	×	×	×	×	×	×
WV(DG)- SP102	×	×	×	×	×	×
WV(DG)- SP105	×	×	×	×	×	×
WV(DG)- SP304	×	×	×	×	×	×
WV(DG)- SP305	×	×	×	×	×	×
WV(DG)- SP509	×	×	×	×	×	×
WV(DG)- SPN310	×	×	×	×	×	×
WV(DG)- SPN311	×	×	×	×	×	×
WV(DG)- SPN531	×	×	×	×	×	×
WV(DG)- SPN611	×	×	×	×	×	×

WV(DG)- SPN631	×	×	×	×	×	×
WV(DG)- SPW310	×	×	×	×	×	×
WV(DG)- SPW311	×	×	×	×	×	×
WV(DG)- SPW611	×	×	×	×	×	×
WV(DG)- SPW631	×	×	×	×	×	×
WV(DG)- SUD638	○	○	○	○	○	○
WV(DG)- SW155	×	×	×	×	×	×
WV(DG)- SW158	×	×	×	×	×	×
WV(DG)- SW314	×	×	×	×	×	×
WV(DG)- SW316	×	×	×	×	×	×
WV(DG)- SW355	×	×	×	×	×	×
WV(DG)- SW395	○	○	○	○	○	○
WV(DG)- SW396	○	○	○	○	○	○
WV(DG)- SW397	○	○	○	○	○	○
WV(DG)- SW458	△	△	△	△	△	△
WV(DG)- SW559	×	×	×	×	×	×
WV(DG)- SW598	○	○	○	○	○	○

WV(DG)- X6511	○	○	○	○	○	○
WV(DG)- X6531	○	○	○	○	○	○

○：動作します △：動作保証外です ×：動作しません

## ●AXIS

	パン・チルト	ズーム	フォーカス	オート フォーカス	ホーム ポジション	プリセット
M1004-W	×	×	×	×	×	×
M1011	×	×	×	×	×	×
M1025	×	×	×	×	×	×
M1034-W	×	×	×	×	×	×
M1045	×	×	×	×	×	×
M1054	×	×	×	×	×	×
M1065	×	×	×	×	×	×
M1103	×	×	×	×	×	×
M1104	×	×	×	×	×	×
M1113	×	×	×	×	×	×
M1114	×	×	×	×	×	×
M1124	×	×	×	×	×	×
M1125	×	×	×	×	×	×
M1144	×	×	×	×	×	×
M1145	×	×	×	×	×	×
M2014-E	×	×	×	×	×	×
M2025	×	×	×	×	×	×
M3006	×	×	×	×	×	×
M3011	×	×	×	×	×	×
M3014	×	×	×	×	×	×
M3024	×	×	×	×	×	×
M3025	×	×	×	×	×	×
M3044	×	×	×	×	×	×
M3045	×	×	×	×	×	×
M3104	×	×	×	×	×	×
M3105	×	×	×	×	×	×

M3113	×	×	×	×	×	×
M3114	×	×	×	×	×	×
M3203	×	×	×	×	×	×
M3204	×	×	×	×	×	×
M5013	○	○	×	×	○	○
M5014	○	○	×	×	○	○
M5054	○	○	○	○	○	○
M7001	△	△	△	△	△	△
M7011	△	△	△	△	△	△
P1204	×	×	×	×	×	×
P1214	×	×	×	×	×	×
P1311	×	×	×	×	×	×
P1343	×	×	×	×	×	×
P1344	×	×	×	×	×	×
P1346	×	×	×	×	×	×
P1353	×	×	×	×	×	×
P1354	×	×	×	×	×	×
P1355	×	×	×	×	×	×
P1364	×	×	×	×	×	×
P1365	×	×	×	×	×	×
P1405	×	×	×	×	×	×
P1425	×	×	×	×	×	×
P3214	×	×	×	×	×	×
P3215	×	×	×	×	×	×
P3225	×	×	×	×	×	×
P3301	×	×	×	×	×	×
P3304	×	×	×	×	×	×
P3343	×	×	×	×	×	×
P3344	×	×	×	×	×	×
P3346	×	×	×	×	×	×
P3353	×	×	×	×	×	×
P3354	×	×	×	×	×	×
P3363	×	×	×	×	×	×
P3364	×	×	×	×	×	×
P3374	×	×	×	×	×	×



P3384	×	×	×	×	×	×
P5414	○	○	○	○	○	○
P5415	○	○	○	○	○	○
P5512	○	○	○	○	○	○
P5514	○	○	○	○	○	○
P5515	○	○	○	○	○	○
P5522	○	○	○	○	○	○
P5532	○	○	○	○	○	○
P5534	○	○	○	○	○	○
P5624	○	○	○	○	○	○
P5635	○	○	○	○	○	○
Q1602	×	×	×	×	×	×
Q1604	×	×	×	×	×	×
Q1614	×	×	×	×	×	×
Q1615	×	×	×	×	×	×
Q1635	×	×	×	×	×	×
Q1755	×	○	○	○	×	×
Q1765	×	×	×	×	×	×
Q1775	×	○	○	○	○	○
Q1941	×	×	×	×	×	×
Q3505	×	×	×	×	×	×
Q3615	×	×	×	×	×	×
Q6042	○	○	○	○	○	○
Q6044	○	○	○	○	○	○
Q6054	○	○	○	○	○	○
Q6055	○	○	○	○	○	○
Q6115	○	○	○	○	○	○
Q7401	△	△	△	△	△	△
Q7404	△	△	△	△	△	△
Q7411	△	△	△	△	△	△
Q8414	×	×	×	×	×	×
V5915	○	○	○	○	○	○

○：動作します △：動作保証外です ×：動作しません

●SONY



	パン・チルト	ズーム	フォーカス	オート フォーカス	ホーム ポジション	プリセット
SNC-CH110	×	×	×	×	×	×
SNC-CH120	×	×	○	○	×	×
SNC-CH140	×	×	○	○	×	×
SNC-CH160	×	○	○	○	×	×
SNC-CH180	×	○	○	○	×	×
SNC-CH210	×	×	×	×	×	×
SNC-CH220	×	×	○	○	×	×
SNC-CH240	×	×	○	○	×	×
SNC-CH260	×	○	×	×	×	×
SNC-CH280	×	○	×	×	×	×
SNC-CX600	×	×	×	×	×	×
SNC- CX600W	×	×	×	×	×	×
SNC-DH110	×	×	×	×	×	×
SNC-DH120	×	○	○	○	×	×
SNC-DH140	×	○	○	○	×	×
SNC-DH160	×	○	○	○	×	×
SNC-DH180	×	○	○	○	×	×
SNC-DH210	×	×	×	×	×	×
SNC-DH220	×	○	○	○	×	×
SNC-DH240	×	○	○	○	×	×

SNC-DH260	×	○	○	○	×	×
SNC-DH280	×	○	○	○	×	×
SNC-EB600	×	×	○	○	×	×
SNC-EB600B	×	×	×	×	×	×
SNC-EB602R	×	○	○	○	×	×
SNC-EB630	×	×	○	○	×	×
SNC-EB630B	×	×	×	×	×	×
SNC-EB632R	×	○	○	○	×	×
SNC-EB640	×	×	○	○	×	×
SNC-EB642	×	○	○	○	×	×
SNC-EM600	×	○	○	○	×	×
SNC-EM602R	×	○	○	○	×	×
SNC-EM630	×	○	○	○	×	×
SNC-EM632R	×	○	○	○	×	×
SNC-EM641	×	○	○	○	×	×
SNC-RS86N	○	×	×	×	△	△
SNC-VB600	×	×	○	○	×	×
SNC-VB600B	×	×	○	○	×	×
SNC-VB630	×	×	○	○	×	×

SNC-VB632	×	○	○	○	×	×
SNC-VB635	×	×	○	○	×	×
SNC-VB640	×	×	○	○	×	×
SNC-VB642	×	○	○	○	×	×
SNC-VM600B	×	○	○	○	×	×
SNC-VM600	×	○	○	○	×	×
SNC-VM602R	×	○	○	○	×	×
SNC-VM630	×	○	○	○	×	×
SNC-VM632R	×	○	○	○	×	×
SNC-VM642	×	○	○	○	×	×
SNC-WR600	○	×	×	×	○	○
SNC-WR602	○	×	×	×	△	△
SNC-WR630	○	×	×	×	○	○
SNC-WR632	○	×	×	×	△	△
SNC-XM631	×	×	×	×	×	×
SNC-XM632	×	×	×	×	×	×
SNC-ZB550	×	×	○	○	×	×
SNC-ZM550	×	○	○	○	×	×

SNT-EX101E	△	△	△	△	△	△
SNT-EX104	△	△	△	△	△	△

○：動作します △：動作保証外です ×：動作しません

## ●CANON

	パン・チルト	ズーム	フォーカス	オートフォーカス	ホームポジション	プリセット
VB-C500	×	×	×	×	×	×
VB-C60	○	○	×	○	×	×
VB-H41	○	○	×	○	×	×
VB-H43	○	○	×	○	×	×
VB-H45	○	○	×	○	×	×
VB-H610	×	×	×	○	×	×
VB-H630	×	×	×	○	×	×
VB-H651	×	×	×	○	×	×
VB-H652	×	×	×	○	×	×
VB-H710	×	×	×	○	×	×
VB-H730	×	×	×	○	×	×
VB-H751	×	×	×	○	×	×
VB-H760	×	○	×	○	×	×

VB-H761	×	○	×	○	×	×
VB-M40	○	○	×	○	×	×
VB-M42	○	○	×	○	×	×
VB-M44	○	○	×	○	×	×
VB-M50	○	○	×	○	×	×
VB-M600	×	×	×	○	×	×
VB-M620	×	×	×	○	×	×
VB-M640	×	×	×	○	×	×
VB-M641	×	×	×	○	×	×
VB-M700	×	×	×	○	×	×
VB-M720	×	×	×	○	×	×
VB-M740	×	×	×	○	×	×
VB-M741	×	×	×	○	×	×
VB-R10	○	○	×	○	×	×
VB-R11	○	○	×	○	×	×
VB-R12	○	○	×	○	×	×
VB-R13	○	○	×	○	×	×

VB-S30	○	○	×	○	×	×
VB-S31	○	○	×	×	×	×
VB-S800	×	×	×	×	×	×
VB-S805	×	×	×	×	×	×
VB-S900	×	×	×	×	×	×
VB-S905	×	×	×	×	×	×
VB-S910	×	○	×	○	×	×

○：動作します △：動作保証外です ×：動作しません

## ● ELMO

	パン・チルト	ズーム	フォーカス	オート フォーカス	ホーム ポジション	プリセット
ESN-H2300	×	×	×	×	×	×
ESN-H2500	×	×	×	×	×	×
ESN- H2500VP	×	×	×	×	×	×
ESN- H8500WP	×	×	×	×	×	×
ESN-H9300	×	×	×	×	×	×
ESN-H9500	×	×	×	×	×	×

○：動作します △：動作保証外です ×：動作しません

## ● JVC ケンウッド

	パン・チルト	ズーム	フォーカス	オート フォーカス	ホーム ポジション	プリセット
VN-H128	×	×	×	×	×	×
VN-H137	×	×	×	×	×	×
VN-H157	×	×	×	×	×	×
VN-H168	×	○	×	×	×	×
VN-H228	×	×	×	×	×	×
VN-H237	×	×	×	×	×	×
VN-H257	×	×	×	×	×	×
VN-H268	×	×	×	×	×	×
VN-H28	×	×	×	×	×	×
VN-H37	×	×	×	×	×	×
VN-H328	×	×	×	×	×	×
VN-H57	×	×	×	×	×	×

○：動作します △：動作保証外です ×：動作しません